


Skrzynia Asiento

W: 5/2016 rys.: 2016-ASENTO.ins

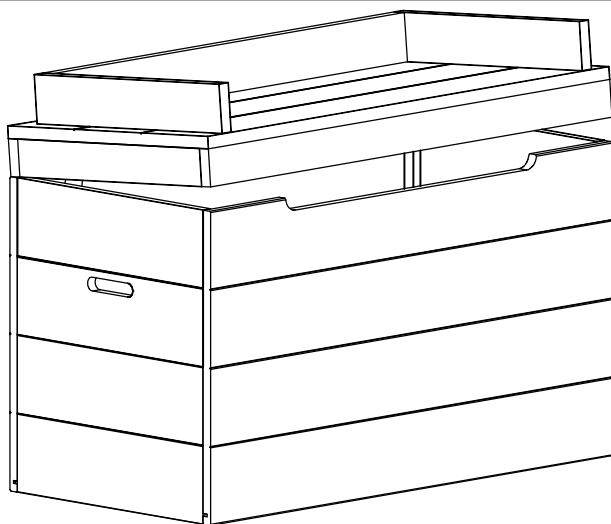

Wymagane narzędzia



Pz2

A



 
Ø3,5x30
x20

B



Ø4,0x16
x4


C



typ B x2

D3
x2

D2
x1

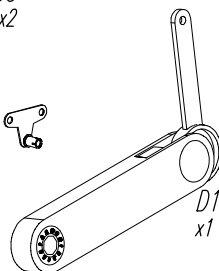


D1
x1

A



x20

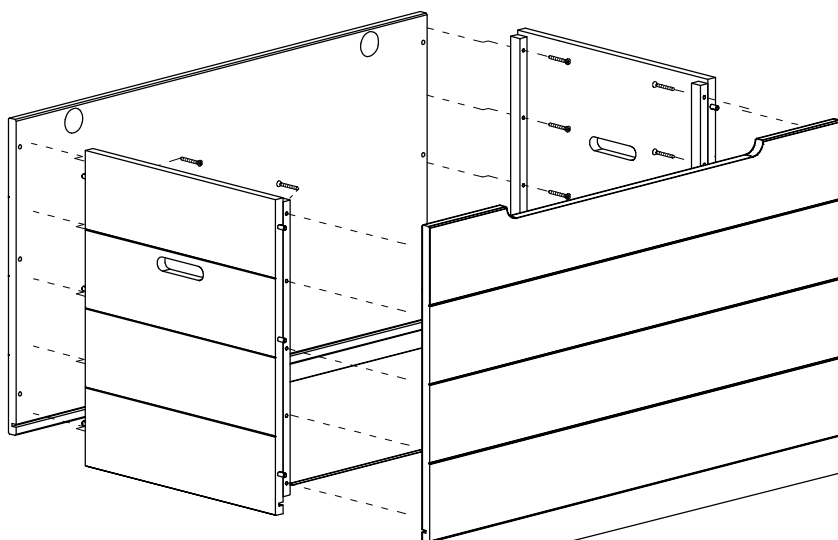


B




Ø4,0x16
x4

 C




x2

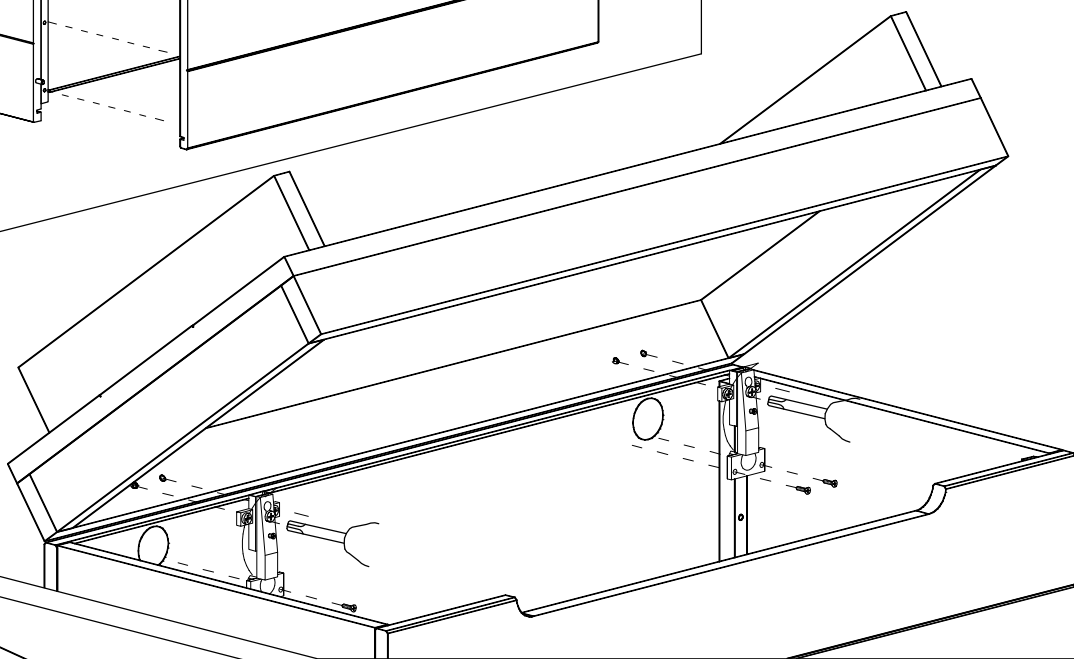

D2

D3(x2)

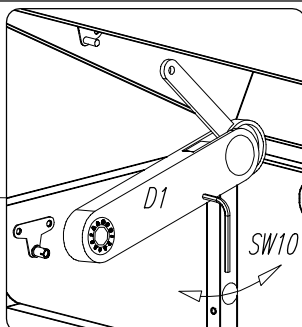

D1

SW10