
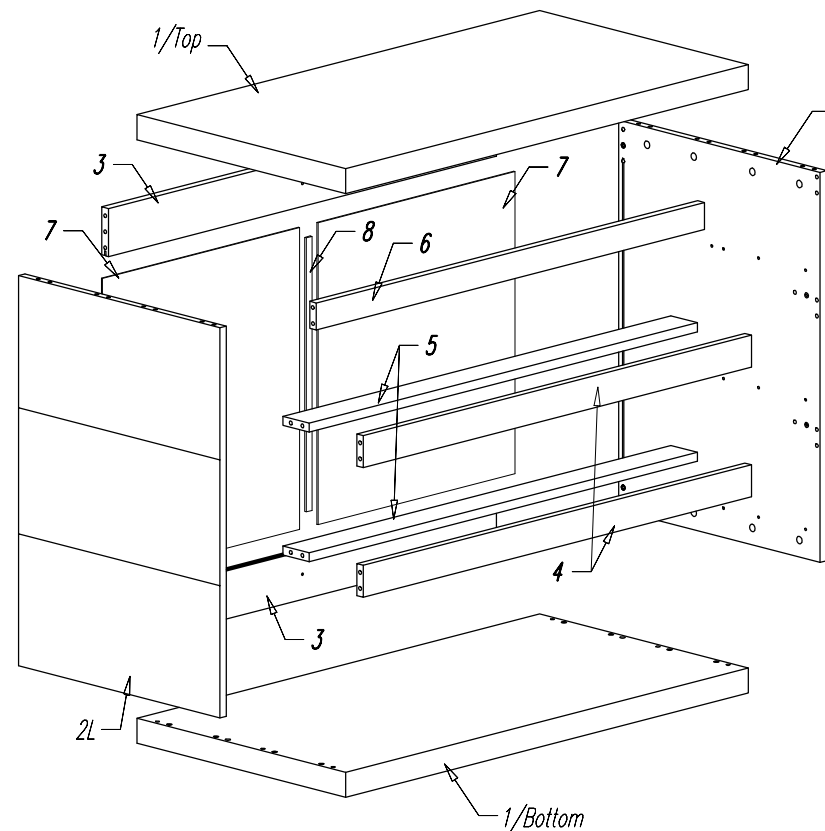
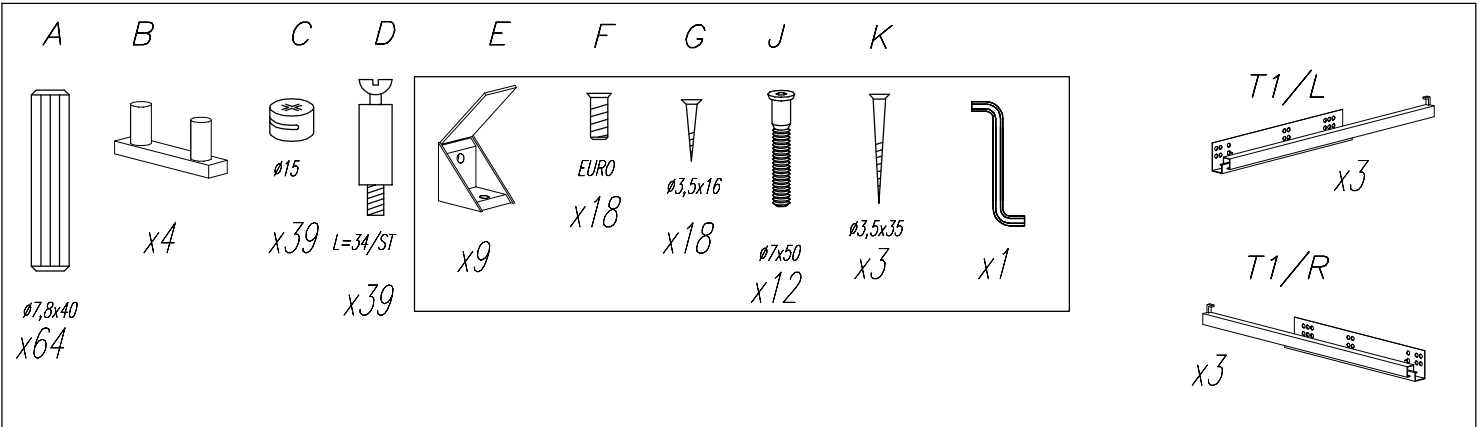


LARA-KOMODE-3DR 3/2011

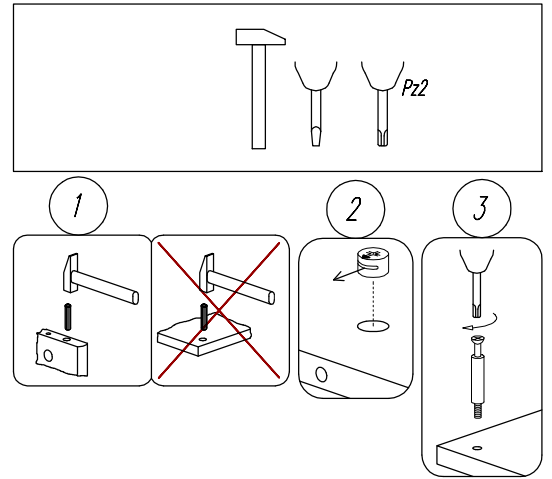


**Colli 1/2:**


- Part no. 1/Top -x1
- Part no. 1/Bottom -x1
- Part no. 3 -x2
- Part no. DR2 -x1
- Part no. DR3 -x3
- Part no. DR4 -x3
- Part no. DR5 -x3
- Part no. DR6 -x3

**Colli 2/2:**


- Part no. 2L -x1
  - Part no. 2R -x1
  - Part no. 4 -x2
  - Part no. 5 -x2
  - Part no. 6 -x1
  - Part no. 7 -x2
  - Part no. 8 -x1
  - Part no. DR1 -x3
  - Part no. DR2 -x2
- Fittings/Beschluge/Quincaillerie  
Assembly instruction /Instruction/Montage

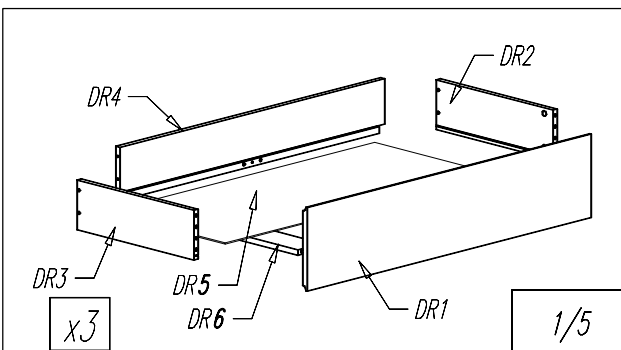

x3

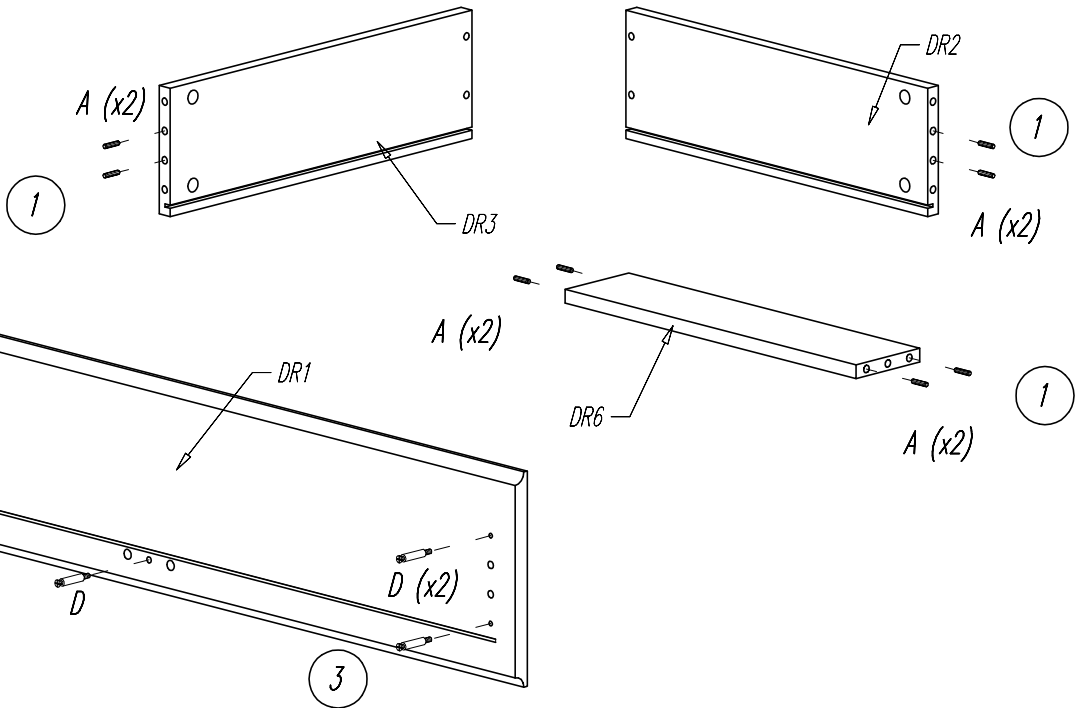

x3

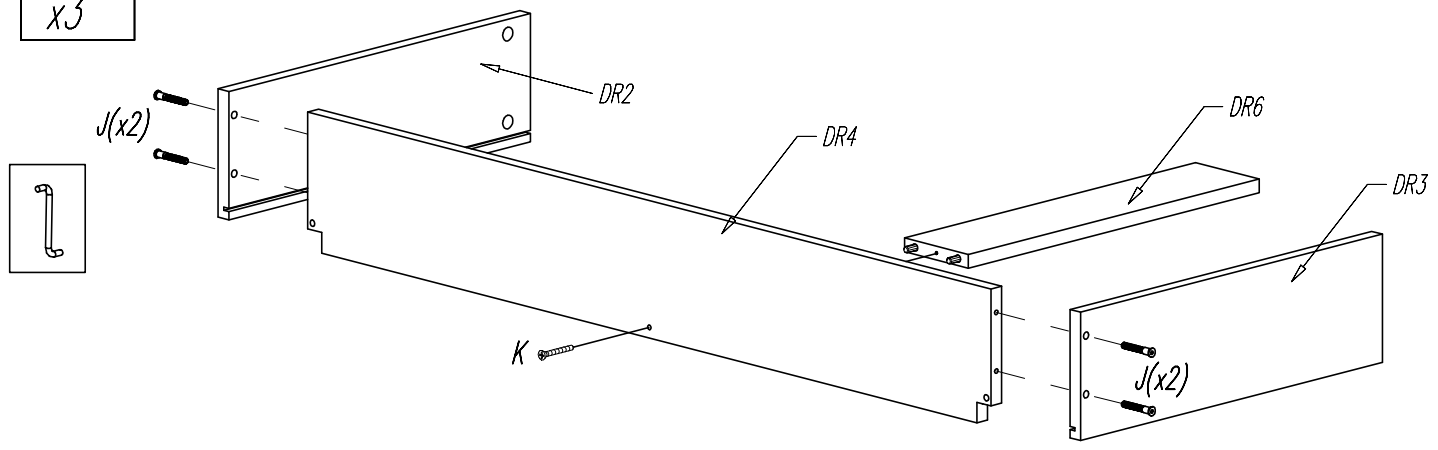

x3

